

## USB download for PDP-LX5090H and PDP-LX6090H


Please do not use the buttons of your remote control, unless explicitly asked.

1. Download the firmware file from the Pioneer Support page and check carefully the instructions how to install the firmware on the USB memory device.


The LEDs of your plasma are situated at the bottom left of your screen.



2. Switch your plasma on (blue LED is lit).

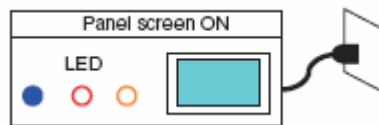


3. Unplug the AC cord from the contact on the wall.

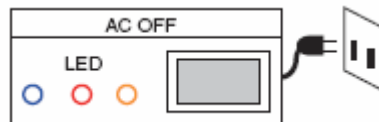


4. Insert the USB memory in your plasma.



5. Plug the AC cord back in (blue LED will light again).  
After +/- 40 sec. an orange LED will be lit.

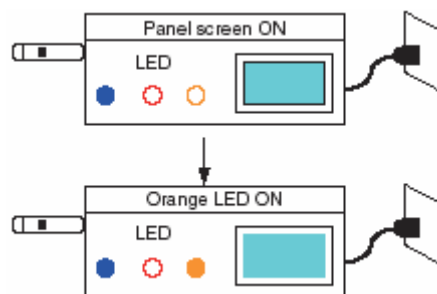

6. The image of the screen will switch off  
After 10 sec. the orange and red LED will be on.

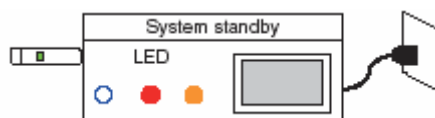

- In case you should have used your remote for steps 4/5/6 and you get stuck, remove the USB memory and start again.

- If you get stuck during step 4/5/6 and you didn't use your remote, please check if the USB download file is not damaged, incorrectly saved or missing and if the USB memory is not defective.


7. Then the blue and red LED start flashing alternately, this means that the USB download has begun.\*




8. After 7 min. the orange LED turns off, this means that the USB download is finished.



9. Unplug the AC cord again so that all LEDs will switch off.

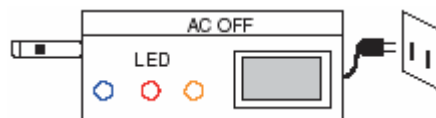

10. Remove the USB memory.

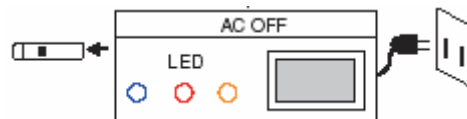


11. Plug the AC cord back in (red LED lights up again).



12. A message is displayed on your plasma back on that the software download was completed.



\*Note:  
If updating is interrupted, the orange LED flashes to warn you of the error.

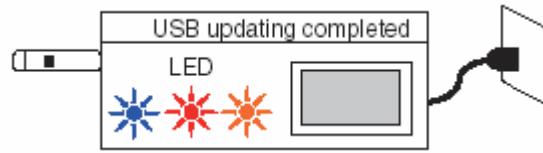

Number of times orange LED flashes	Error	Description
2	Version comparison error	The same version of the software has already been installed. Download is not required.
3	USB Download startup error	USB Download cannot start. Format the USB memory or use another USB memory.
10	No USB	USB memory failure. Confirm the connection of the USB memory. If it is not solved, exchange it for another USB memory, then download again.
Other	Download Error	DTV Download failed. Try to download it again. If this doesn't solve the problem, contact your dealer or nearest service center.

**Example of how the orange LED flashes 2 times (version comparison error).**

